

WINTERIZING FOR SEASONAL USE

MODELS: 1000P, 1600P, 1600H
260PN, 425PN, 425HN



WARNING

LP & NG ARE EXTREMELY FLAMMABLE SO
TAKE EXTRA PRECAUTIONS WHEN
PERFORMING ANY WORK TO THE HEATER

Please note that the instructions in the manual state that the water heater must not be installed in a location where it may be exposed to freezing temperatures. If the heater must be left in a space which is likely to experience freezing temperatures (less than 32° F), all water must be drained from the heater. Damage as a result of improper drainage will not be covered under warranty.

Draining the heater

1. Shut off gas to heater.
 2. Shut off water supply to the heater using installer supplied cold water isolation valve. If none installed, install before proceeding.
 3. Open lowest hot water faucet to drain lines and relieve pressure in heater.
 4. Position a bucket below water connections to water heater.
 5. Remove the retaining clip (Fig. 1, Num. 1) from the threaded bushing.
 6. Remove the threaded bushing (Fig. 1, Num. 2) from the water valve.
 7. Contents of heater and water lines will drain.
 8. Removal of piping between the water valve and heat exchanger may be necessary to ensure all water has been drained (Fig. 1, Num. 3)
- On Models 1000P, 1600P, 260PN, 425PN:
Remove retaining clips at water valve and heat exchanger connections.
- On Models 1600H, 425HN:
Remove retaining clips at water valve and base of hydrogenerator.
9. Remove piping and save for reinstallation when heater is returned to service.



Note: If using the AQ4 powervent, all flow switch piping should be disconnected and drained.

FIGURE 1

